



# INSTALLATION.

## Step 1: Clean the repair area.


Clear away loose debris, dust, or standing water to ensure a strong bond. A clean surface helps the PatchPal™ bags adhere and last longer.



## Step 2: Fill the pothole.

Place PatchPal™ bags directly into the hole, filling it slightly higher (4-5cm) than the road surface. This extra height allows for proper settling once traffic drives over it.

### Overfill 4-5cm

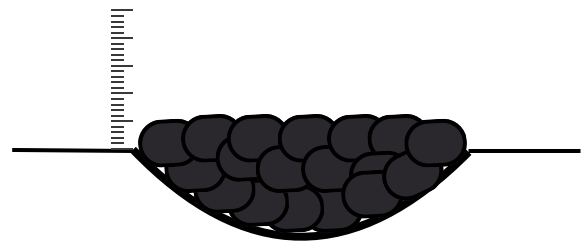


## Step 3: Ready for traffic.

You can drive a vehicle over the patch immediately to speed up compaction. If not, normal to heavy road traffic will naturally compact the material over time.

In low traffic areas, we recommend the user to drive over the patch immediately to speed up compaction. Not necessary in high traffic areas.

### Drive Over with Vehicle

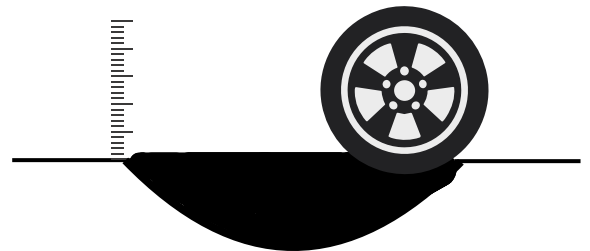

## Step 4: Done.

The patch will fully settle over time and blend flush with the road. At that point, your repair is complete and long-lasting.

